

# AXL SE DO16/1

**Axioline Smart Elements, digital output module,  
digital outputs: 16, 24 V DC, 500 mA,  
connection technology: 1-conductor**



Data sheet  
108700\_en\_02

© PHOENIX CONTACT 2020-10-27

## 1 Description

You can integrate Axioline Smart Elements into systems with the Smart Element interface. This Smart Element emits digital signals.

### Features

- 16 digital outputs
- 24 V DC, 500 mA
- Connection of actuators in single-wire technology
- Substitute value behavior of the outputs can be parameterized for the Smart Element
- Device rating plate stored



This data sheet is only valid in association with the UM EN AXL SE SYS INST user manual.



Make sure you always use the latest documentation.  
It can be downloaded at: [phoenixcontact.net/product/1088129](https://phoenixcontact.net/product/1088129)

---

<b>2</b>	<b>Table of contents</b>	
1	Description .....	1
2	Table of contents .....	2
3	Ordering data .....	3
4	Technical data .....	3
5	Maximum outputs power consumption when inductive loads are switched off .....	7
6	Internal circuit diagram .....	7
7	For your safety .....	8
	7.1 Intended use .....	8
	7.2 Qualification of users .....	8
	7.3 Disconnecting or plugging in a Smart Element .....	8
	7.4 Strain relief.....	8
	7.5 Locking a Smart Element.....	8
	7.6 Applications with UL approval .....	8
8	Terminal point assignment as well as diagnostics and status indicators.....	9
	8.1 Terminal point assignment .....	9
	8.2 Local diagnostics and status indicators .....	9
9	Connection example.....	9
10	Process data.....	10
11	Parameter, diagnostics and information (PDI) .....	10
12	Standard objects .....	10
	12.1 Diagnostics state (0018hex: DiagState).....	11
	12.2 Acknowledge diagnostic messages (0019hex: ResetDiag) .....	11
	12.3 Substitute value behavior during bus reset (PDOUT) (0024hex: ResetCode) .....	12
	12.4 Reset parameterization (002Dhex: ResetParam) .....	12
13	Device descriptions .....	12

### 3 Ordering data

Description	Type	Order No.	Pcs./Pkt.
Axiline Smart Elements, Digital output module, Digital outputs: 16, 24 V DC, 500 mA, connection method: 1-conductor, degree of protection: IP20	AXL SE DO16/1	1088129	1


Documentation	Type	Order No.	Pcs./Pkt.
User manual, English, Axiline Smart Elements	UM EN AXL SE SYS INST	-	-

#### Additional ordering data

For additional ordering data (accessories), please refer to user manual UM EN AXL SE SYS INST or go to [phoenixcontact.net/products](http://phoenixcontact.net/products).

### 4 Technical data

#### Dimensions (nominal sizes in mm)

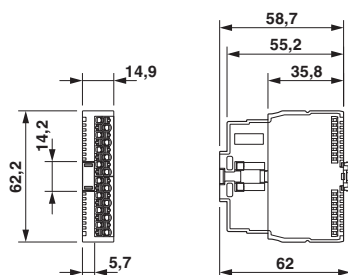

Width	14.9 mm
Height	62.2 mm
Depth	62 mm

#### General data

Color	traffic grey A RAL 7042
Weight	37 g
Ambient temperature (operation)	-25 °C ... 60 °C
Ambient temperature (storage/transport)	-40 °C ... 85 °C
Permissible humidity (operation)	5 % ... 95 % (non-condensing)
Permissible humidity (storage/transport)	5 % ... 95 % (non-condensing)
Air pressure (operation)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Air pressure (storage/transport)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Degree of protection	IP20
Protection class	III (IEC 61140, EN 61140, VDE 0140-1)
Overvoltage category	II (IEC 60664-1)

**General data**

Degree of pollution	2 (EN 60664-1)
Mounting position	See the system in which the Smart Element is used.



Do not use the Smart Element in an atmosphere that contains corrosive gas.

**Connection data: I/O**

Connection method	Push-in connection
Conductor cross section solid / stranded	0.25 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> / 0.25 mm <sup>2</sup> ... 1.5 mm <sup>2</sup>
Conductor cross section [AWG]	24 ... 16
Stripping length	8 mm



Please observe the information provided on conductor cross sections in the “AxioLine Smart Elements” user manual.

With a small conductor cross section and high current, the terminal point temperature can reach up to 31 K above the ambient temperature.

When selecting the cables, observe the permissible operating temperature in accordance with IEC or UL.

**Interface: Smart Element interface**

Number	1
Connection method	Card edge connector
Start time until ready to operate	< 500 ms (after switching on the supply voltage (object 003D <sub>hex</sub> : WakeUpTime))

**Communications power supply of the Smart Elements (U<sub>SE</sub>)**

Supply voltage	using card edge connectors
Current draw	See documentation for the system in which the Smart Element is used.

**I/O supply (U<sub>P</sub>)**

Nominal supply voltage	24 V DC (using card edge connectors)
Supply voltage range	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Current consumption	min. 12 mA (without connected peripherals) max. 6 A
Power consumption	min. 288 mW max. 180 W (of which 1.1 W internal losses)
Surge protection	electronic (35 V, 0.5 s)
Reverse polarity protection	parallel diode
Protection	See the system in which the Smart Element is used.




**NOTE: Damage to the electronics**

To ensure reverse polarity protection, provide external protection for the Smart Element in the system that you are using it in. If you use a fuse, the power supply unit must be capable of supplying four times the nominal current of the fuse. This ensures that the fuse trips reliably in the event of a fault.



When starting up the Smart Element for the first time in the system that you have installed it, protect the system with a 5 A fuse. When all Smart Elements in the system are correctly connected, the 5 A fuse can be replaced with a fuse as specified for the system that you have installed the Smart Element in.

After that, you can load the Smart Element by up to 6 A. Loads over 6 A are not permitted.

<b>Digital outputs</b>	
Number of outputs	16
Connection method	Push-in connection
Connection technology	1-conductor
Nominal output voltage	24 V DC
Maximum output current per channel	500 mA
Maximum output current per device	6 A (Also make sure that the maximum permissible current of 6 A is not exceeded.)
Nominal load, ohmic	12 W (48 Ω, with nominal voltage)
Nominal load, inductive	12 VA (1.2 H, 48 Ω, with nominal voltage)
Nominal load, lamp	12 W (at nominal voltage)
Signal delay	max. 100 μs (when switched on) max. 100 μs (when switched off; with at least 50 mA load current)
Switching frequency	max. 1200 per second (With resistive load, at least 50 mA load current) max. 1 per second (with inductive load) max. 16 per second (with nominal lamp load)
Load min.	10 kΩ
Energy consumption	see diagram
Limitation of the voltage induced on circuit interruption	-32.8 V DC ... -15 V DC
Output voltage when switched off	max. 1 V
Output current when switched off	max. 300 μA
Behavior with overload	Shutdown with automatic restart
Behavior with inductive overload	Output can be destroyed
Reverse voltage resistance to short pulses	limited protection up to 0.5 A for 1 s
 <b>NOTE: Damage to the electronics</b> If there is a faulty external voltage (reverse voltage) at one of the outputs, the output may be destroyed. This may cause unintentional setting of further outputs.	
Overcurrent shut-down	min. 0.7 A
Output current with ground connection interrupt when switched off	< 1 mA
Process data update	typ. 370 μs
Short-circuit and overload protection	electronic
<b>Input and output address area</b>	
Input address area	0 Byte
Output address area	2 Byte
<b>Configuration and parameter data in a PROFIBUS system</b>	
Required parameter data	9 Byte
Required configuration data	6 Byte

**Electrical isolation/isolation of the voltage areas**

Test section	Test voltage
Communications supply / 24 V supply (I/O)	500 V AC, 50 Hz, 1 min.
Communications supply / functional ground	500 V AC, 50 Hz, 1 min.
24 V supply (I/O)/functional ground	500 V AC, 50 Hz, 1 min.

**Mechanical tests**

Vibration resistance in acc. with EN 60068-2-6/ IEC 60068-2-6	5g
Shock in acc. with EN 60068-2-27/IEC 60068-2-27	30g
Continuous shock according to EN 60068-2-27/ IEC 60068-2-27	10g

**Conformance with EMC Directive 2014/30/EU****Noise immunity test in accordance with EN 61000-6-2**

Electrostatic discharge (ESD) EN 61000-4-2/ IEC 61000-4-2	Criterion B, 6 kV contact discharge, 8 kV air discharge
Electromagnetic fields EN 61000-4-3/IEC 61000-4-3	Criterion A, Field intensity: 10 V/m
Fast transients (burst) EN 61000-4-4/IEC 61000-4-4	Criterion B, 2 kV
Transient overvoltage (surge) EN 61000-4-5/ IEC 61000-4-5	Criterion B, I/O cables: $\pm 1$ kV asymmetrical
Conducted interference EN 61000-4-6/IEC 61000-4-6	Criterion A, Test voltage 10 V
<b>Noise emission test as per EN 61000-6-4</b>	Class A

**Approvals**

For the latest approvals, please visit [phoenixcontact.net/products](http://phoenixcontact.net/products).

## 5 Maximum outputs power consumption when inductive loads are switched off




### NOTE: Damage to the electronics

When you use an external freewheel limit, the freewheeling voltage to a maximum of -15 V.

The value **must** be above -15 V, so -12 V, for example.

The external freewheel limit has no function with a higher negative voltage.

Figure 1 Maximum outputs power consumption when inductive loads are switched off

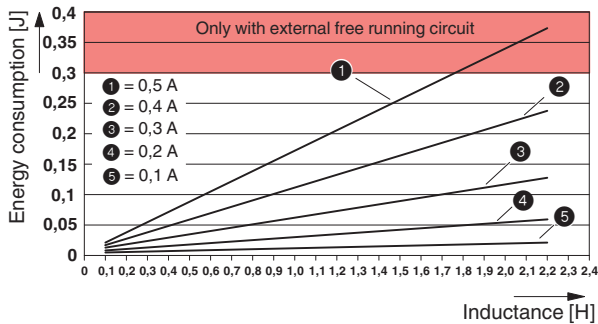


The specifications in the diagram refer to a maximum switching frequency of 1 Hz.

The diagram shows the maximum amount of energy that may be fed back into the corresponding output groups (outputs 1 to 8, 9 to 16) for each switch-off procedure when switching off an inductive load without external freewheeling circuit.

The current data refers to the ohmic DC voltage component of the inductive load.

## 6 Internal circuit diagram

Figure 2 Internal wiring of the terminal points

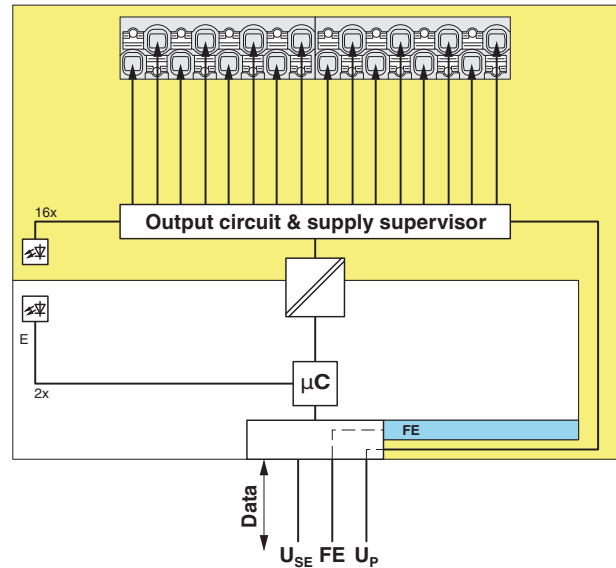

Key:

- Data Data transmission
- $U_{SE}$  Communications power supply of the Smart Element
- FE Functional ground
- $U_P$  I/O supply of the Smart Element
- Microcontroller
- Electrical isolation for data or power supply
- LED
- Output circuit and voltage monitoring
- Electrically isolated areas

## 7 For your safety

### 7.1 Intended use

Use Smart Elements exclusively in accordance with the specifications in the data sheet and the "AxioLine Smart Elements" user manual.  
Please also refer to the documentation for the system in which the Smart Elements are used.

### 7.2 Qualification of users

The use of products described in this data sheet is oriented exclusively to electrically skilled persons or persons instructed by them. The users must be familiar with the relevant safety concepts of automation technology as well as applicable standards and other regulations.

### 7.3 Disconnecting or plugging in a Smart Element



#### **NOTE: Damage to contacts or malfunction**

Before performing work on a Smart Element, disconnect the power to the Smart Element.

This means:

- Disconnect the connected I/O devices from the power.
- Switch off the I/O supply voltage  $U_P$ !
- Switch off the communications power  $U_{SE}$ .  
For the system in which the Smart Element is used, this means the following: Switch off the voltage that generates the  $U_{SE}$ .

### 7.4 Strain relief



#### **NOTE: damage to the contacts**

Physical overloads can result in damage to the terminal points.

- Relieve strain in the connected cables.

### 7.5 Locking a Smart Element

Make sure that each Smart Element is locked in its slot. This is only ensured if the unlocking mechanism has been pushed into the guide as far as it will go.

See also "AxioLine Smart Elements" user manual.

### 7.6 Applications with UL approval



#### **CAUTION!**

- The external circuits intended to be connected to this device shall be galvanically separated from MAINS supply or hazardous live voltage by reinforced or double insulation and meet the requirements of SELV/PELV (Class III) circuits of UL/CSA/IEC 61010-1, -2-201.
- The device has to be built-in the final safety enclosure, which has adequate rigidity according to UL 61010-1, -2-201 and meets the requirements with respect to spread of fire.



Information:


To install the device according to the UL/CSA/IEC standard, the following rules must be observed.

- If the equipment is used in a manner not specified, the protection provided by the equipment may be impaired.
- Minimum temperature rating of the cables to be connected to the field wiring terminals:  
100 °C, AWG 24 ... 16
- Use copper conductors only.



## 8 Terminal point assignment as well as diagnostics and status indicators

Figure 3 Terminal point assignment as well as diagnostics and status indicators

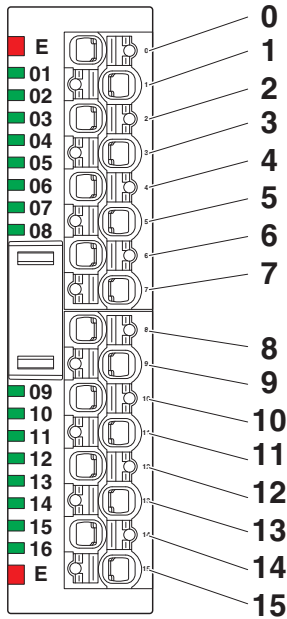

### 8.1 Terminal point assignment

Terminal point	Assignment	Channel	Signal
0	Digital output	1	OUT01
...	...	...	...
15	Digital output	16	OUT16


### 8.2 Local diagnostics and status indicators

Designation	Color	Description	
E	Red	Error	
		Off	No error
		Flashing (0.5 Hz)	Error in Smart Element Replace the Smart Element.
		Flashing (4 Hz)	Communication error Check whether the Smart Element has been plugged in correctly.
	On	I/O error Check the connected components and wiring. Remove the error.	
01 ... 16	Yellow	Output status	
		On	Output is set.
		Off	Output is not set.

See also “Diagnostic state (0018<sub>hex</sub>: DiagState)” section, “Possible error codes” table.

## 9 Connection example

Figure 4 Connection in 1-conductor technology

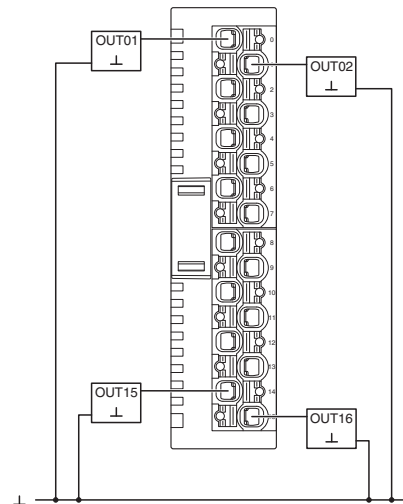

Make sure that the GND of the actuators and the GND for U<sub>p</sub> have the same potential!

## 10 Process data

The process data is mapped in Motorola format (Big Endian).

Byte	0							
Bit	7	6	5	4	3	2	1	0
Signal	OUT 08	OUT 07	OUT 06	OUT 05	OUT 04	OUT 03	OUT 02	OUT 01
Terminal point	07	06	05	04	03	02	01	00

Byte	1							
Bit	7	6	5	4	3	2	1	0
Signal	OUT 16	OUT 15	OUT 14	OUT 13	OUT 12	OUT 11	OUT 10	OUT 09
Terminal point	15	14	13	12	11	10	9	8

## 11 Parameter, diagnostics and information (PDI)

Parameter and diagnostic data as well as other information are transmitted as objects via the PDI channel.

For more detailed information on all possible standard objects for AxioLine Smart Elements, please refer to the UM EN AXL SE SYS INST user manual.

The standard objects necessary for operation are described in the following section.

The following applies for the tables below:

Abbreviation	Meaning
A	Number of elements
L	Length of the elements in bytes
R	Read
W	Write

## 12 Standard objects

Index (hex)	Object name	Data type	A	L	Rights	Meaning/contents	Startup parameters	
<b>Device type</b>								
0037	DeviceType	Octet string	1	8	R	Device type	0040 0002 0000 1D19 <sub>hex</sub>	No
<b>Diagnostics objects</b>								
0018	DiagState	Record	11	74	R	Diagnostic state		No *
0019	ResetDiag	UINT8	1	1	R/W	Acknowledge diagnostic messages		No *
<b>Objects for process data management</b>								
0024	ResetCode	UINT16	1	2	R/W	Substitute value behavior during bus reset (PDOOUT)		Yes *
0025	PDIN	Octet string	1	2	R	Input process data is not available.		No
0026	PDOOUT	Octet string	1	2	R	OUT process data The structure corresponds to the representation in the "Process data" section.		No
<b>Objects for device management</b>								
002D	ResetParam	UINT8	1	1	R/W	Reset parameterization		No *

Startup parameters are stored permanently in the Flash memory.

The objects identified with \* in the last column are described in more detail in the following sections.

The description of the other objects is to be found in the user manual UM EN AXL SE SYS INST.

### 12.1 Diagnostics state (0018<sub>hex</sub>: DiagState)

This object is used for a structured message of an error.

A detailed description of the object is provided in user manual UM EN AXL SE SYS INST.

Possible error codes

Subindex	02	03	04	08	0B		
Error	Priority	Channel	Error code	Function group	Text	E LED	Corrective
	hex	hex	hex				
No error	00	00	0000	General	Status OK	○	
Overload or short circuit of an output	01	FF	2344	DO	Overload or short circuit (output)	●	Check the connected components and wiring.
I/O supply voltage (U <sub>p</sub> ) is not present.	01	FF	3130	General	Supply missing (U <sub>p</sub> )	●	Check the supply voltage.
Error in the Smart Element firmware	01	FF	6100	General	Firmware error, update required	●	Replace the Smart Element.
Problem communicating with the Smart Element	01	FF	6130	General	Smart Element missing	☀	Check whether the Smart Element has been plugged in correctly. If the error is still present, replace the Smart Element.
Error in the parameter memory	01	FF	6320	General	Parameter error, repeat parameterization	●	Error in the parameter memory. Parameterize the Smart Element.

Key

Priority	00 <sub>hex</sub>	No error
	01 <sub>hex</sub>	Error
Channel	00 <sub>hex</sub>	No error
	FF <sub>hex</sub>	Entire device

LED	○	Off
	●	On
	☀	Flashing (4 Hz)

### 12.2 Acknowledge diagnostic messages (0019<sub>hex</sub>: ResetDiag)

You can delete the diagnostic memory of the Smart Element and acknowledge the diagnostic messages with this object.

Acknowledge diagnostic messages	
Value (hex)	Meaning
00	Permit all diagnostic messages
02	Delete and acknowledge all diagnostic messages that are still pending
06	Delete and acknowledge all diagnostic messages and do not permit new diagnostic messages
Other	Reserved

### 12.3 Substitute value behavior during bus reset (PDOUT) (0024<sub>hex</sub>: ResetCode)

Use this object to parameterize the behavior of the Smart Element outputs in the event that process data is missing.

0024 <sub>hex</sub> : substitute value behavior during bus reset (PDOUT) (read, write)			
Subindex (hex)	Data type	Length in bytes	Meaning/contents
00	UINT16	2	Read or write entire object. Substitute value behavior of the outputs

Value range	
Value (hex)	Meaning
0000	0 is output to all output bits (default)
0001	1 is output to all output bits
0002	Hold last value
Other	Reserved

### 12.4 Reset parameterization (002D<sub>hex</sub>: ResetParam)

Use this object to reset certain parameters to the factory default settings (default values).

To reset the parameters, value 01<sub>hex</sub> must be transferred during write access.

Reset the following parameters using this object:

Index (hex)	Object name	Meaning
0024	ResetCode	Substitute value behavior during bus reset (PDOUT)

## 13 Device descriptions

The device is described in the device description files.

The device descriptions for controllers from Phoenix Contact are included in PC Worx and PLCnext Engineer, as well as in the corresponding service packs.

The device description files for other systems are available for download at [phoenixcontact.net/products](http://phoenixcontact.net/products) in the download area of the bus coupler installed.